

Centrifuge Liners & Bags

Sefar manufactures innovative solutions for all types of centrifuges used in the pharmaceutical and food industries as well as for applications in chemical and environmental. Our products are made to meet the specific needs of these filtration applications.

Product Features

Sefar filter solutions for centrifuges

Centrifuges operate on the principle of centrifugal force and a filter cloth to separate solids from liquids. High rotational speed provides high centrifugal force that allows the suspended solid in the feed to settle on the surface of a filter media. Washing processes can be applied at the same rotational speed and in the same centrifuge vessel. Centrifuges are used in discontinuous or batch operations. The use of dedicated Sefar fabrics allows reduction of the residual moisture in the filter cake to minimum values. Typical applications are in life science, Pharmaceutical (API, insulin, oncology), fine chemicals where high purity and closed filter systems are required. Further applications are in food (starch & tapioca), minerals (base and precious metals, coal, fertilizers and in environmental (FGD, gypsum). Depending on the grade of automation, bulk size and solid discharge, there are different types of centrifuges in use that require a filter media:

- Bag centrifuge (top discharge)
- Peeler centrifuges (vertical and horizontal)
- Inverting filter centrifuge

Sefar manufactures innovative filter solutions for all different types of centrifuges used in the chemical, mineral, pharmaceutical, food and life science industries.

Inverting filter centrifuge Centrifuge bag









DOWNLOADS


Brochure: Process Filtration (PDF 5300 kb)

Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone +61 2 8822 1700 Fax +61 2 8822 1744

oceaniasales@sefar.com



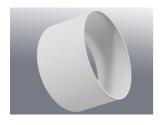



Centrifuge liner



.....

Sefar filter solutions for OEM

Our products meet the specific needs of these filtration applications and are successfully running all over the world on all known centrifuge brands and OEMs, such as:

Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone +61 2 8822 1700 Fax +61 2 8822 1744

oceaniasales@sefar.com



Heinkel	Comi Condor	KMPT Andritz (smart fix)	Rousselet Robatel
Cima	Ferrum	Alfa Laval	Frewitt
Matsumoto	MKK Mitsubishi	Riera Nadeu	D. Parik
	МКК		

Sefar filters for centrifuges are matched to the filter machines used, whether they are scraper centrifuges, bag centrifuges, top discharge centrifuges or inverting filter centrifuges. Our ready-made solutions are based on optimized Sefar designs that have been proven in use over decades. Filtration efficiency, life time, certified filter cloths and ease of installation are the key features for your success. Thanks to our wide range of fabrication capabilities and technologies, we are able to provide customer-specific products for optimal fit and function.

Filter media technology

Sefar's **D**ouble Layer **W**eave (DLW) technology combines a fine filter fabric (particle retention) and an integrated backing cloth (drainage) in one filter cloth. This fabric is available in a wide range of polymers, such as PP, PET and PEEK giving our customers an excellent solution based on their chemical and thermal requirements. SEFAR TETEX DLW fabrics are produced in our European weaving facilities using Sefar yarn to meet the highest quality requirements and offer decisive advantages:

- Low downtime
- High product yield

Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone +61 2 8822 1700 Fax +61 2 8822 1744

oceaniasales@sefar.com

- Ease of installation
- Excellent cake release


In addition to our SEFAR TETEX DLW fabrics, we also offer monofilament and multifilament filter cloths under the brands SEFAR TETEX MONO and SEFAR TETEX MULTI. These fabrics serve all of needs of the versatile centrifuge market, such as, maximum permeability and optimal cleaning properties, or maximum particle retention, strength and cloth flexibility.

In addition to our high quality production, based on ISO 9001, Sefar has set the industry standard when it comes to certification. Our filters are available with all required certificates relating to EU and FDA food compliance. The externally validated migration limits of dedicated fabrics (e.g. SEFAR TETEX DLW PHARMA) are underlined by our in-house extractable tests of every batch produced.

Double-layer fabric



 With integrated backing cloth for excellent drainage and stability

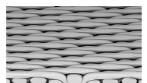

Monofilament fabric

For maximum
permeability and
optimal cleaning
properties

Multifilament fabric



For maximum particle retention, strength and cloth flexibility

Specially made for life science industries

Sefar controls every crucial production step from yarn production to the ready-to-use filters making it possible for complete traceability of all critical parts.

Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone +61 2 8822 1700 Fax +61 2 8822 1744

oceaniasales@sefar.com

Sefar has perfected its manufacturing processes to meet the needs of the pharmaceutical industry. Our exclusive GMP compliant filter products are manufactured in our cleanroom following strict GMP guidelines.







Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone +61 2 8822 1700 Fax +61 2 8822 1744

oceaniasales@sefar.com

Go to product page

S E

F

R

SEFAR



CONTACT

Local contact
Contact form

Send mail Please call us for further information: Phone CH: +41 71 898 5700

Locations





Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone: +61 2 8822 1700 Fax: +61 2 8822 1744

E-Mail

Sefar Pty Ltd Filtration and Metal Mesh

Unit 4, 68 Callaway Street Wangara WA 6065 Australia Phone: +61 8 9303 2600 Fax: +61 8 6305 0930



Sefar Pty Ltd Filtration and Metal Mesh

19-21 Huntingwood Drive Huntingwood NSW 2148 Australia Phone +61 2 8822 1700 Fax +61 2 8822 1744